

V 04025



www.VillageLighting.com

STANDARD GARLAND HANGER (LARGE)

MODEL #: V-20918 Series | PATENT NO. US 9,480,206

BEFORE YOU INSTALL:











1. Is your door jamb between 51-81 inches wide?
2. Do you have at least 2.25 inches of exposed door frame IN FRONT of the door?
3. Your door opens inward (Away from the Garland Hanger).
4. Your door does NOT have a screen door in front of it.

SCAN HERE
FOR VIDEOS
& PRODUCT
SUPPORT




For assistance with assembly,
replacement parts or to activate your warranty:
www.VillageLighting.com | Support@VillageLighting.com


PARTS

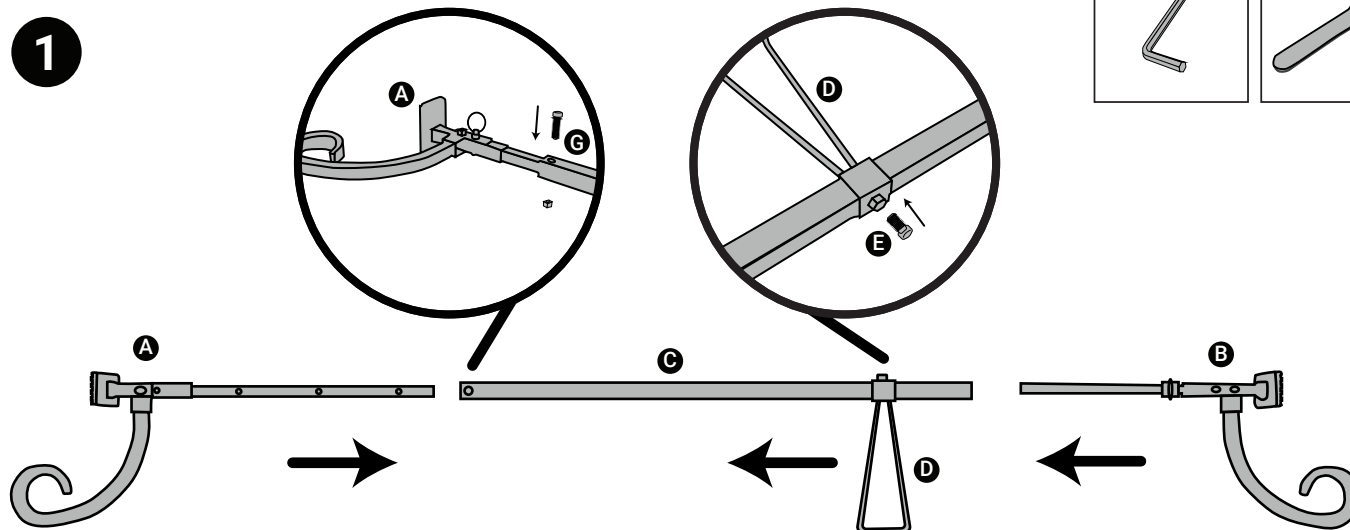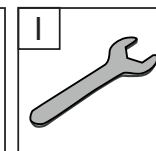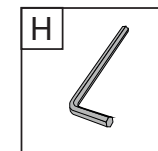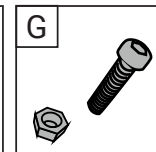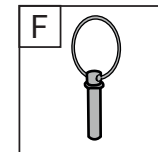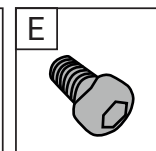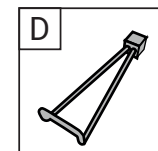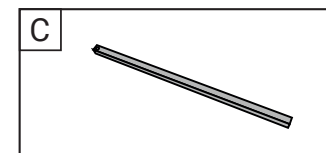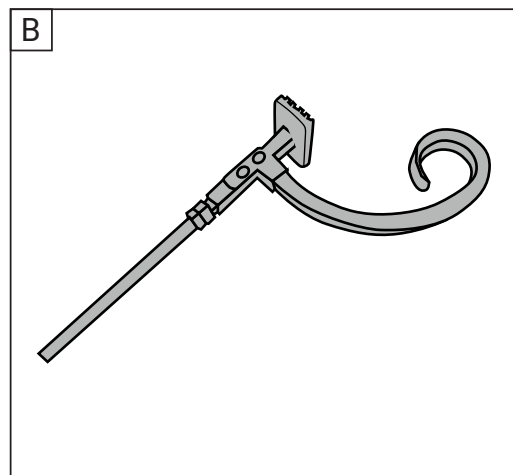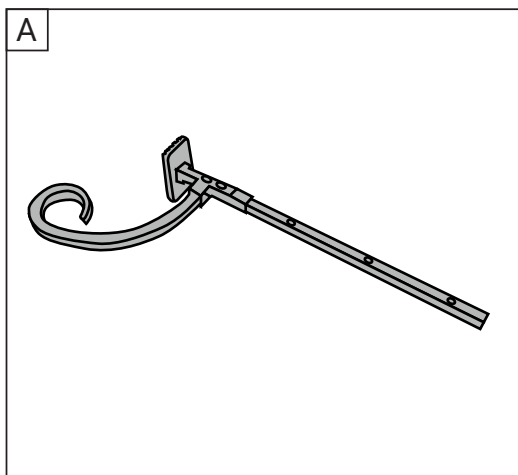

ADJUST WING POSITION IF NEEDED

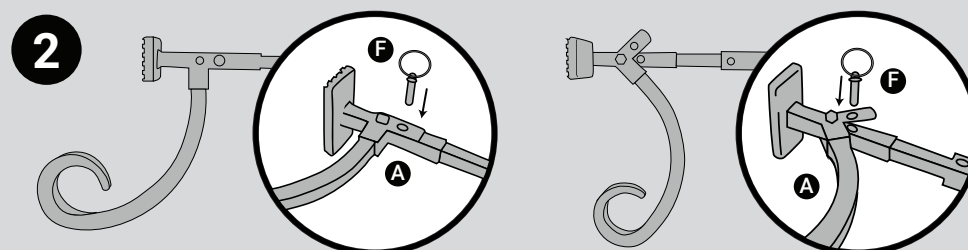

Move the wing into your desired position and insert the pin to lock

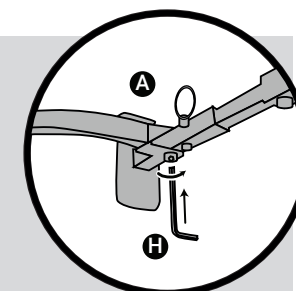

Tighten the wing bolts

