

NUNCHUCK™ V2 & REMOTE

Battery pack usage guide





NEW Versatile battery pack. Use the primary pack for lighter, more condensed space usage. Or, plug in the second pack for longer battery life.

You may also plug an AC Adapter into the primary pack and skip the batteries all together. (Sold Separately)

TA + BATTERY + + SATTERY +

1 Install 2 X D size batteries in each tube. Insert the batteries positive side up. The lights will flash three times once batteries are installed and caps tightened.




INSTALL THE BATTERIES


! Insure the caps are screwed on straight. If the caps are cross threaded or not fully seated. Lights will not operate.



2 Install 2 X AAA batteries into the remote. Once batteries are installed, the light will illuminate with each button press.

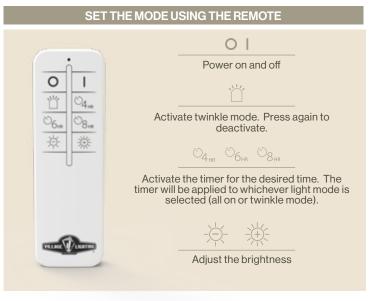

All on Timer on (6 hour, All on) Twinkle mode Timer on (8 Hour, Twinkle) Off

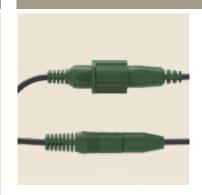

1 Make sure the connections to both the lighting and other battery pack are secure. Check for any loose, damaged or cut wires.

+


TROUBLESHOOTING

2 Insure the batteries are fresh and have been inserted into the tubes the correct direction.



3 Make sure the caps are screwed on straight.

OPTIONAL ACCESSORY: AC ADAPTER (V-21045) Save on batteries! Use our AC adapter* and plug it directly into the primary pack's power port. AC ADAPTER PRIMARY PACK *Sold separately

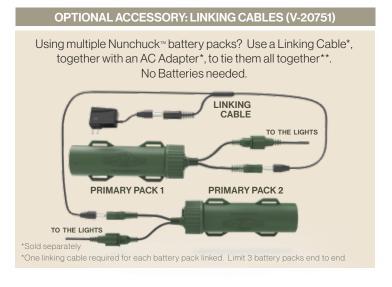





https://villagelighting.co m/blogs/product-usage -and-troubleshooting-g uides/greenery-usage-a nd-troubleshooting